

IONIQ 5 FL Periodic Maintenance Schedule

Cooling system

Number of Months or Kilometers whichever comes first														
Month		12	24	36	48	60	72	84	96	108	120	132	144	156
KM	1K	15K KM	30K KM	45K KM	60K KM	75K KM	90K KM	105K KM	120K KM	135K KM	150K KM	165K KM	180K KM	195K KM
Coolant (Low Conductivity)	Replace every 60k km or 3 years													
Coolant (Standard)	At first replace every 120k KM or 5 years after that replace every 30k km or 24 month													
Cooling system	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

Power Train

Number of Months or Kilometers whichever comes first														
Month		12	24	36	48	60	72	84	96	108	120	132	144	156
KM	1K	15K KM	30K KM	45K KM	60K KM	75K KM	90K KM	105K KM	120K KM	135K KM	150K KM	165K KM	180K KM	195K KM
Drive shaft and boots	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Reduction Gear Fluid	✓				✓				R				✓	

Brake System

Number of Months or Kilometers whichever comes first														
Month		12	24	36	48	60	72	84	96	108	120	132	144	156
KM	1K	15K KM	30K KM	45K KM	60K KM	75K KM	90K KM	105K KM	120K KM	135K KM	150K KM	165K KM	180K KM	195K KM
Parking Brake	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Brake pedal	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Brake Fluid	✓	✓	R	✓	R	✓	R	✓	R	✓	R	✓	R	✓
Disc brakes and pads	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Brake lines, hoses and connections	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

✓ : inspect and check if need to replace R: replace L: Lubricate

IONIQ 5 FL Periodic Maintenance Schedule

Air Condition

Number of Months or Kilometers whichever comes first														
Month		12	24	36	48	60	72	84	96	108	120	132	144	156
KM	1K	15K KM	30K KM	45K KM	60K KM	75K KM	90K KM	105K KM	120K KM	135K KM	150K KM	165K KM	180K KM	195K KM
Air conditioner refrigerant	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Inspect AC System Operation	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Air conditioner compressor	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
climate control air filter	✓	R	R	R	R	R	R	R	R	R	R	R	R	R

Electric System

Number of Months or Kilometers whichever comes first														
Month		12	24	36	48	60	72	84	96	108	120	132	144	156
KM	1K	15K KM	30K KM	45K KM	60K KM	75K KM	90K KM	105K KM	120K KM	135K KM	150K KM	165K KM	180K KM	195K KM
12V Aux Battery condition	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Check the performance of the windshield wipers	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
check the vehicle by scantool	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
All Electrical System	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

✓ : inspect and check if need to replace R: replace L: Lubricate

IONIQ 5 FL Periodic Maintenance Schedule

Chassis

Number of Months or Kilometers whichever comes first														
Month		12	24	36	48	60	72	84	96	108	120	132	144	156
KM	1K	15K KM	30K KM	45K KM	60K KM	75K KM	90K KM	105K KM	120K KM	135K KM	150K KM	165K KM	180K KM	195K KM
Tires (Pressure & Tread wear)	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Lubricate door and hood lock and latches	L		L		L		L		L		L		L	
Lubricate door rubber weather strips and dooe checker	L		L		L		L		L		L		L	
Body condition for (Rust, Corrosion and perforation)	✓		✓		✓		✓		✓		✓		✓	
clean body and door holes	✓		✓		✓		✓		✓		✓		✓	
Steering Rack & linkage & boots	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Bolt and Nuts on chassis body	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Tire Rotation	Rotate every 15k km and Repalce Every 45k km													
Front suspension ball joints	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

✓ : inspect and check if need to replace R: replace L: Lubricate